

## READER DEFAULT CODE OBDII

Reference : AC 5248



<b>Item name</b>	READER DEFAULT CODE OBDII
<b>Bar code</b>	3701555321882
<b>Text</b>	<p>This OBDII reader is designed for your car's "Engine" management system ("Engine" light). It includes basic OBDII functions such as: reading and deleting error codes with their designations, reading "real-time" data, displaying freeze frame, displaying I/M readiness, and displaying vehicle information.</p> <p>Note: In the event of a "permanent code" being read by the device, the OBDII reader will be able to clear the fault code and switch off the engine light only when the necessary repairs have been carried out.</p>
	Multilingual: English, French, German, Spanish and Portuguese.
<b>Product highlight</b>	Universal
<b>Applications</b>	<p>Models :</p> <ul style="list-style-type: none"><li>- OBDII protocols: CAN, J1850 PWM, J1850 VPW, ISO9141 and KWP2000</li><li>- 12v voltage supplied by OBD socket (16-pin) on post-1996 OBDII-compliant American, European and Asian vehicles</li></ul>
<b>Warranty period</b>	2 years
<b>Tariff code</b>	Tariff Normal (TN)
<b>Warranty Procedure</b>	DIAGNOSTIC



CLAS EQUIPEMENTS  
83, chemin de la CROUZA  
73800 CHIGNIN  
France

Tel : +33 (0) 4 79 72 62 22  
Fax :

Monday to Friday - From 8 to 12h  
and from 13h30 to 17h30 (16h30 on  
Friday)