

## STROBE LIGHT

Reference : AC 5038



|                           |  |
|---------------------------|--|
| <b>Item name</b>          | STROBE LIGHT   |
| <b>Bar code</b>           | 3700461485688  |
| <b>Introduction</b>       | <p>The strobe lamp is connected to a candle wire via an induction sensor. It produces a flash synchronized with the ignition point. This powerful flash, directed at the ignition marks engraved on the crankshaft pulley or flywheel, "freezes" the position of these marks in relation to the fixed index, making it easy to check whether the ignition advance setting is correct or not. The exact ignition point can therefore be set with great precision.</p> |
| <b>Text</b>               | Please note that this lamp cannot be used to adjust the phase shift.   |
| <b>Specifications</b>     | CAUTION: The exact parameters for setting the Engine's ignition timing can usually be found in the manufacturer's technical manual.  |
| <b>Warranty period</b>    | 2 years  |
| <b>Fuel type</b>          | Gasoline   |
| <b>Voltage</b>            | 12V  |
| <b>Tariff code</b>        | Tariff Normal (TN)   |
| <b>Warranty Procedure</b> | EASY   |



2  
WARRANTY



12V

TN

CLAS EQUIPEMENTS  
83, chemin de la CROUZA  
73800 CHIGNIN  
France

Tel : +33 (0) 4 79 72 62 22  
Fax :

Monday to Friday - From 8 to 12h  
and from 13h30 to 17h30 (16h30 on  
Friday)