

## Reader default code ObdII

Reference : AC 5247



<b>Item name</b>	Reader default code ObdII
<b>Bar code</b>	3700461494390
<b>Introduction</b>	Reads and deletes most basic fault codes (engine faults, pollutant emissions). Allows real-time control of ECU values.
<b>Text</b>	Uses the vehicle's battery as a power source, so no internal battery is required
<b>Specifications</b>	Specifications : <ul style="list-style-type: none"><li>- works on most vehicles (from 2001 (petrol) and 2003 (diesel) for European vehicles, and 1996 for American vehicles) compatible with OBD2 and CAN</li><li>- retrieves vehicle information (based on VIN number), the device will work as long as the vehicle manufacturer has given access to the diagnostic information</li><li>- reads and clears generic and manufacturer-specific diagnostic trouble codes (DTCs)</li><li>- turns off the Engine light (MIL)</li><li>- supports multiple fault code requests, including general, manufacturer-specific and pending codes</li><li>- on-screen code definitions</li><li>- live fault code reading</li><li>- determines cause of Check Engine Light (MIL)</li><li>- easy-to-use with detachable OBD2 cable</li><li>- works safely with vehicle ECU</li><li>- reliable, safe and conveniently sized</li><li>- easy-to-read 2" TFT color display</li><li>- multi-language: EN, FR, DE, ES, IT, PT, FN, NL</li></ul>

- dimensions: 124x72x18mm

- weight: 180g

**Warranty period** 2 years

**Tariff code** Tariff Normal (TN)

**Warranty Procedure**DIAGNOSTIC



CLAS EQUIPEMENTS  
83, chemin de la CROUZA  
73800 CHIGNIN  
France

Tel : +33 (0) 4 79 72 62 22  
Fax :

Monday to Friday - From 8 to 12h  
and from 13h30 to 17h30 (16h30 on  
Friday)